

# EasyCoper Instructions

Below are two illustrations of coping crown molding. Miter the crown molding just as you would if using a hand coping saw. The left column shows a left side cope starting at the top of the molding and going toward the bottom. The right column is a right side cope starting at the bottom of the molding and going toward the top. Both copes can be made from either direction, depending on which way you feel more comfortable. Always keep the blade away from the sides of the EasyCoper.



1. Nub the long point off.



2. Place molding in EasyCoper and shift to opposite side that you are cutting from.




3. Start cutting the molding, following the profile along the cut of the molding.



4. Continue this cut until it is through the bottom side of the molding.



5. Pull the molding to the opposite side and finish the cut.

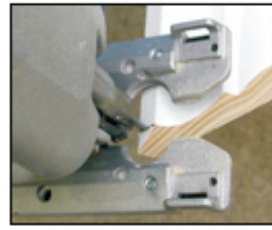

1. Nub the long point off.



2. Make a relief cut and shift to opposite side that you are cutting from.



3. Start cutting the molding, following the profile along the cut of the molding.



4. When you reach the angle at the top of the crown, stop the saw and remove the blade.



5. Pull the molding to the opposite side and finish the cut.